


# NOMADICARK

## INSTALLATION INSTRUCTIONS




### RAD Window with Alu Blind


#### COMPONENTS

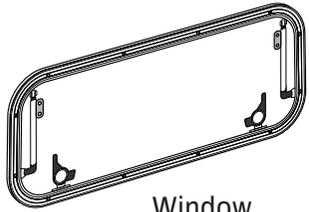

Window

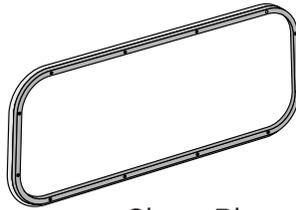

Clamp Ring

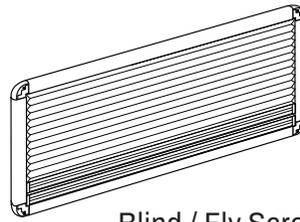

Blind / Fly Screen



x1 per hole

Clamp locator screws



x4

Blind screws



x4

Corner Caps

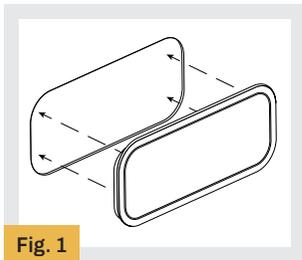


Fig. 1

#### STEP 1

Check the window size against the installation hole. Standard clearance requirement is 1.5mm between the window and installation hole.

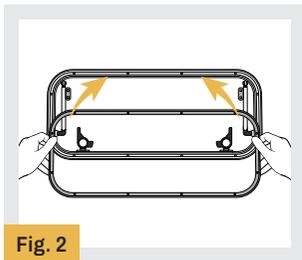


Fig. 2

#### STEP 2

With the window supported from the exterior, install the clamp ring from the vehicle interior by matching the locator screws.

The wall depth range is 25-34mm. If installing onto a narrower depth, a frame must be added before fitting the clamp ring.

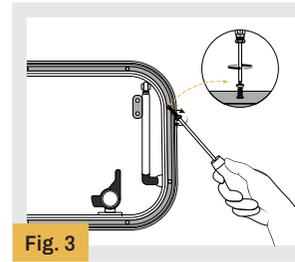


Fig. 3

#### STEP 3

Loosely fit all locator screws, then tighten by hand using a phillips head screwdriver.

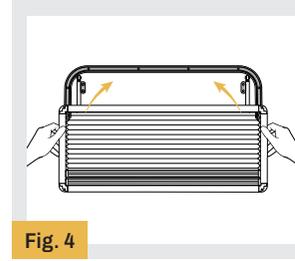


Fig. 4

#### STEP 4

Make sure the blinds are aligned centrally with the installation hole, maintaining an even distance both vertically and horizontally. There's a groove between the inner edge of the blind and the window to assist with alignment.

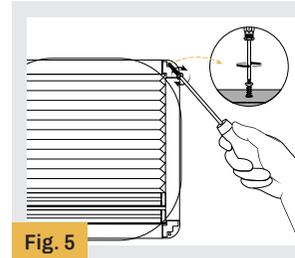


Fig. 5

#### STEP 5

Install the blind to the window using the cross groove countersunk head self-tapping screws provided. Do this via the four rounded corners.

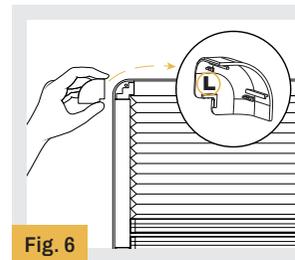


Fig. 6


#### STEP 6

Carefully add the round corner covers by fitting each into the slit with a matching L or R (on the inside). Remove all protective film from the covers.

*NOTE. Improper installation, adjustment, alteration or maintenance can cause damage. Always refer to this manual. For assistance or additional information please consult a qualified installer, retailer or supplier.*

# NOMADICARK

## RAD Window with Alu Blind

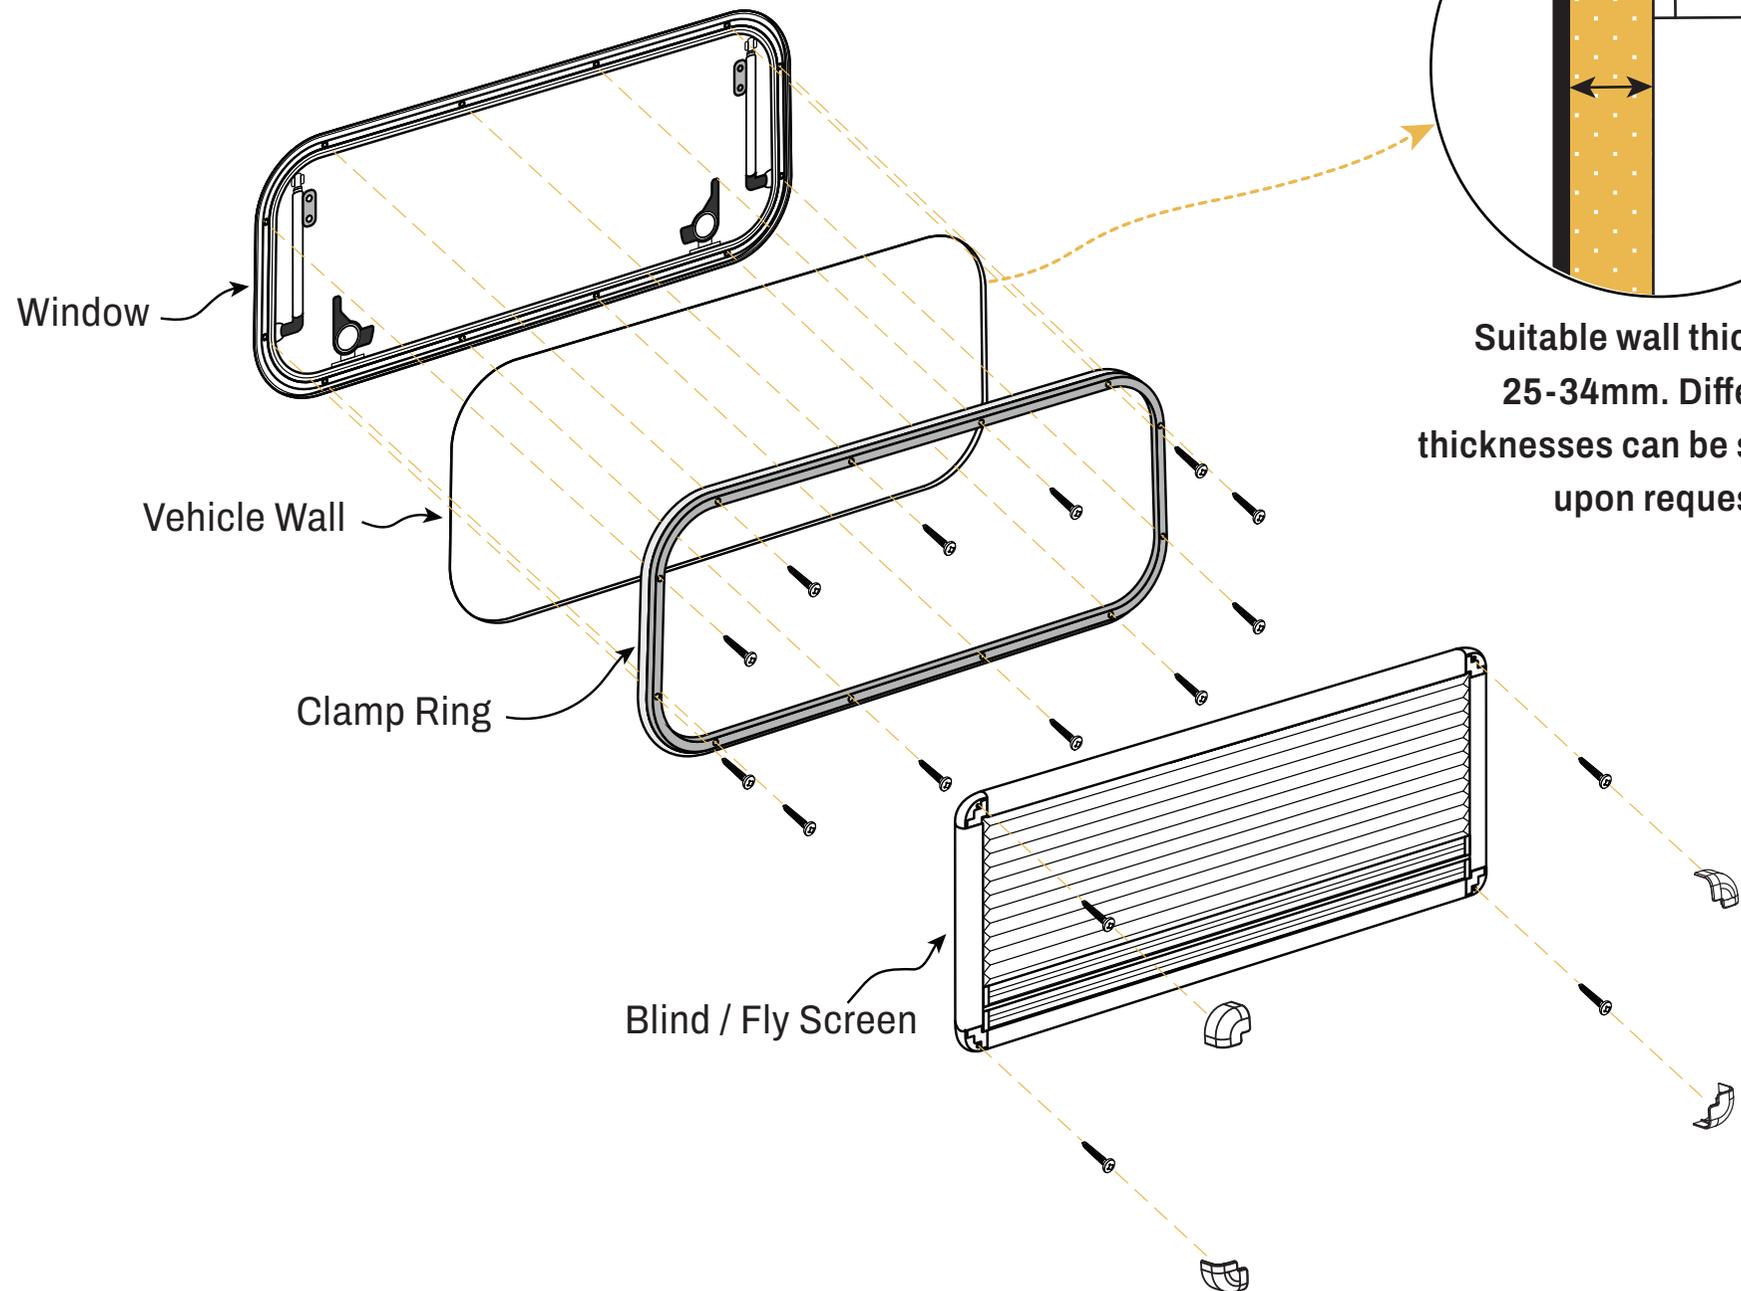

# SIZING & CUT OUT

